



AFAYA-PEN

Your Pen for U-Learning

Quick Guide OF AFAYA-PEN **A-106S**



AFAYA Corparation CO.LTD



Product Features:

1

AFAYA-PEN A-106S is the 6th model of AFAYA electronic pen series.


➤ Innovative U-Learning Device:

AFAYA-PEN A-106S can work on stickers, posters, magazines, maps or books. A-106S can pronounce the contents being touched in real time, any time and any where.

➤ A-106S can be used as an MP3 music player.

Appearances and Components:

2

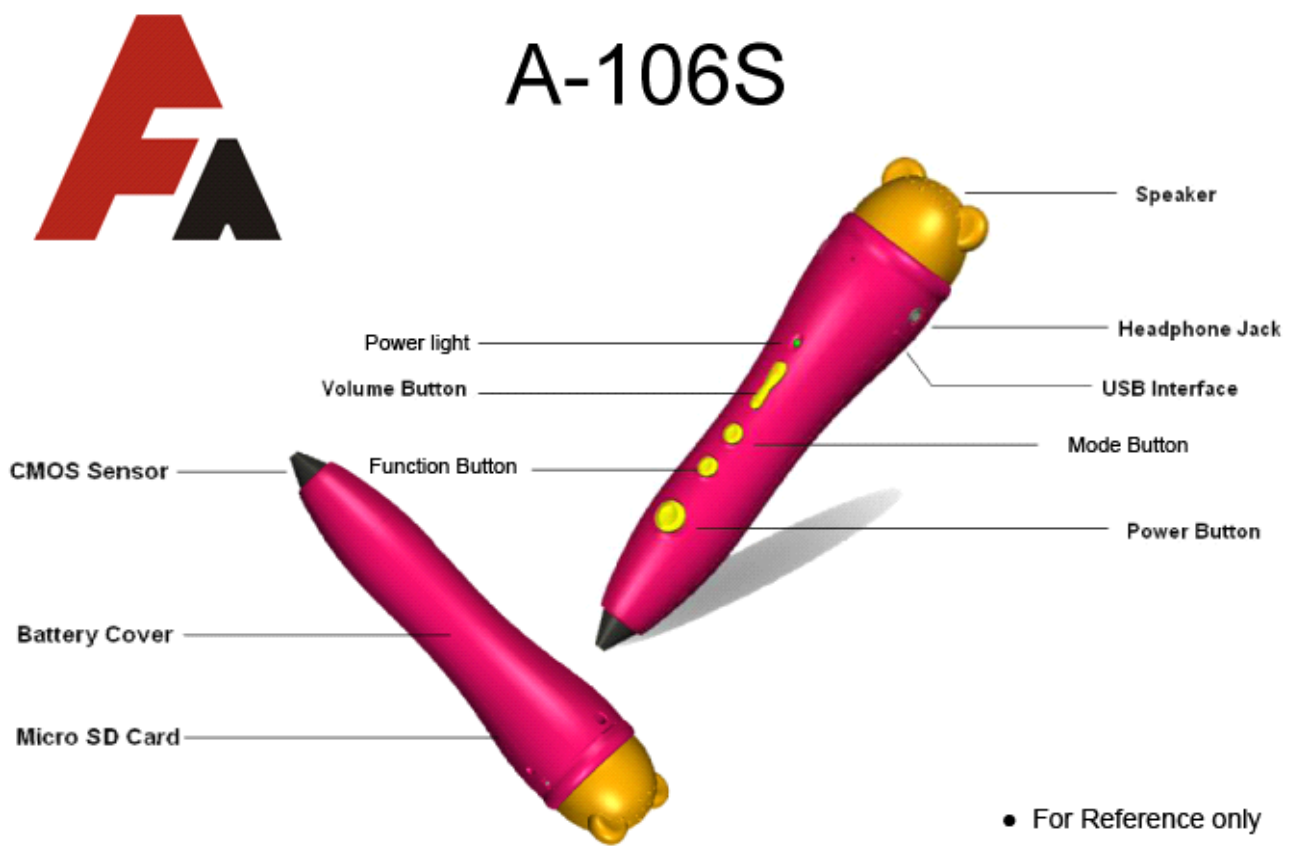

Function Keys:

3

- A-106S can only be in operation when the batteries and memory card are properly Installed.
- There are a total of five buttons associated with this product. When applying the Top View picture, the buttons are:
 - ▶ **Power Button:** Hold Power Button for three seconds. A-106S is on when Power Light is flashing. Hold Power Button for another three seconds to turn off A-106S.
 - ▶ **Function Button:** Pause/ Play function. Press Function Button to pause or continue playing AP3/ MP3 file.



- ▶ **Mode Button:** Press Mode Button to shift between AP3 Mode and MP3 Mode.
- ▶ **Volume Button -:** Press Volume Button - once to decrease the volume by one level. Hold Volume Button - for two seconds, A-106S plays the next AP3/ MP3 file.level.
- ▶ **Volume Button +:** Press Volume Button + once to increase the volume by one level. Hold Volume Button + for two seconds, A-106S plays the previous AP3/ MP3 file.

Battery Installation:

4

- ☞ Be sure that power is off before changing batteries
- ☞ Unscrew and open the battery cover. Install two AAA batteries (rechargeable battery can be used). Close and screw the battery cover.

Note: A-106S can work without batteries when it is connected with PC through USB cable.

Memory Card Installation/ Remove:

5

- ☞ Micro-SD card is used in A-106S.
- ☞ Switch off A-106S before installation.
- ☞ Unscrew and take off the Micro-SD card cover.
- ☞ Insert the card into the slot. A click sound will be heard to indicate the firm installation of the card.
- ☞ Close and screw the card cover.
- ☞ To remove the card, press the card gently. Then the card pops up and can be taken out.

Power on A-106S:

6

- ☞ Hold Power Button for three seconds and the LED lights. When there is a starting speech existing, LED lights after the speech.
- ☞ A-106S enters working status.

Power off A-106S

7

- ☞ When in working status, hold Power Button for three seconds to turn off A-106S.

Operation:

8

One of the characteristics of A-106S is that it can combine the publications with related AP3 file and function interactively. **Operate A-106S with the following steps:**

- ☞ Power on A-106S.



- ☞ A-106S plays the name of the publication. If otherwise, check your local dealer for the right sound file.
- ☞ Keep 45~90 degrees to the publication. This will ensure the best angle for U-learning.
- ☞ To keep loudspeaker facing the users is recommended when headphone is not used.
- ☞ Please refer to the instructions associated with the publications for further special operating instructions if applicable.

Downloading Sound Files:

9

A-106S cannot download files directly from PC. Use a Micro-SD card reader to download files to the memory card before using.

MP3 Player:

10

- ☞ Download MP3 files into Micro-SD card.
- ☞ Mp3 Player Panel is printed on the last page of this Quick Guide as well as the attached cardboard. *Use this panel as following:*
 - ▶ **Click “MP3” to enter MP3 Player Mode.** When entering MP3 Player Mode, A-106S automatically plays the first MP3 file in the Micro-SD card.
 - ▶ **Click “Play/ Pause”** to pause when playing or continue to play.
 - ▶ **Click “Rewind” or “Forward”** to play the previous or the following file. Clicking “Rewind” when A-106S is playing the first file, A-016S plays the last file in the list and vice versa.
 - ▶ **Click “AP3” to enter AFAYA-PEN Mode** and A-106S automatically plays the first book in the Micro-SD card.
- ☞ Function Keys can be used in the MP3 Player Mode. *The function of each key is as following:*
 - ▶ **Volume Button +/-:** volume adjustment. Hold Volume Button +/- for two seconds as Rewind/ Forward.
 - ▶ **Mode Button:** Switch to AP3 Mode.
 - ▶ **Function Button:** Pause/ Play.
 - ▶ **Power Button:** Press Power Button to exit MP3 Player Button and enter AFAYA-PEN Mode. Hold Power Button for three seconds to power off A-106S.



Play / Pause




Rewind



Forward



Product Specification:

A-106	Items	Specification
	Capacity	64MB ~ 2GB
	Dimensions	165 mm (L) x 39 mm (W) x 39 mm (H)
	Weight	55 grams (without battery and card)
	Batteries	2 AAA batteries
	Earphone	8.3mW, 32Ω max
	SNR	> 90dB
	File format	AP3 format
	Music	Bit rate : 8Kbps~320Kbps, support VBR
	Temperature	-10°C to 45°C

Note: This specification is subject to change without further notice.



AFAYA Corpatation CO.LTD

Post code: 251

Tel: +886-2-28080580

FAX: +886-2-28085080

E-mail: info@afaya.com.tw

Website: www.afaya.com.tw

Address: 5F, 27-10, Sec 2, Jungjeng E. Rd., Danshuei Jen, Taipei, Taiwan